
First Time Installation

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket.

1.Press the menu button

2.Press ► button,enter "SETUP" page,choose First Time Installation by pressing ► button.

Select Language


Press ◀ / ▶ button to select the language to be used for menus and message.

Select Country

Press ▼ / ▲ button to highlight country menu.


Press ◀ / ▶ button to select the country you want to.

Press OK for Auto Tuning.

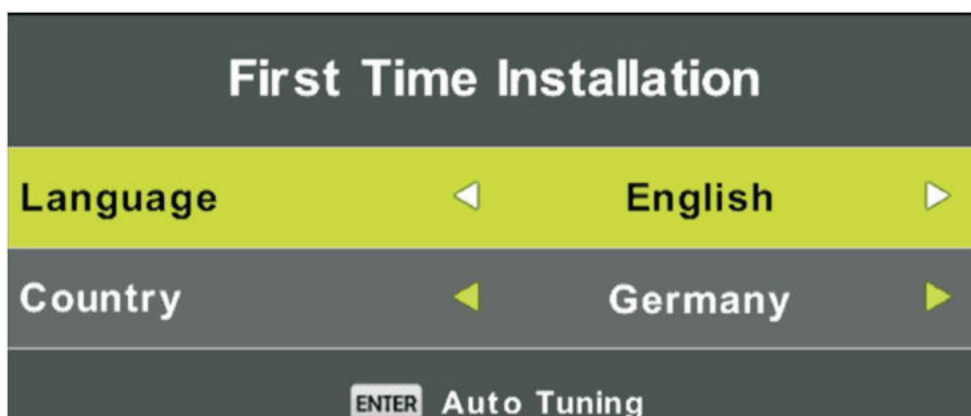

Tune Type :Select Tune Type as DTV+ATV or DTV, you can choose Air(DVB-T), Cable(DVB-C), in "Digital Type".

Air(DVB-T) Auto Tune:

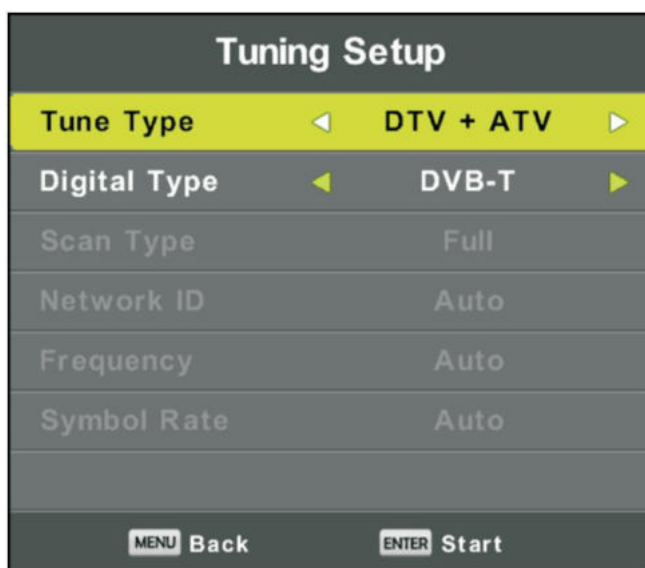

Select DTV+ATV in "Tune Type", and DVB-T in Digital Type, then press OK to start tuning.

Cable (DVB-C) Auto Tune:

Tuning Setup		
Tune Type	◀ DTV + ATV ▶	
Digital Type	◀ DVB-C ▶	
Scan Type	◀ Full ▶	
Network ID	◀ Auto ▶	
Frequency	Auto	
Symbol Rate	◀ Auto ▶	
MENU Back ENTER Start		

Select DVB-C in “Digital Type”:

There are 2 options for DVB-C “Scan Type”:

- 1.Full: Select “FULL” in “Scan Type” and choose “OK” to start Auto Search for the channels.
- 2.Network: Select “Network” in “Scan Type” Input the number of the Network ID of the channel and choose the frequency and press “OK” button to find specific TV channel. **(Please notice you need to know the Network ID + Frequency+Symboal Rate from your TV provider).**

Satellite(Auto Tune):

Tuning Setup		
Tune Type	◀ DTV ▶	
Digital Type	◀ Satellite ▶	
Satellite	◀ 01 HOTBIR... ▶	
Scan Mode	◀ Default ▶	
Channel Type	◀ Free+Scaram... ▶	
Service Type	◀ Aull ▶	
MENU Back ENTER Start		

Select “Satellite” in “Digital Type”:

Operations in Satellite Auto Tune menu are show in the following table:

Option	Value
Satellite	60 satellite for searching
Scan Mode	Default,Blind Scan,Network
Channel Type	Scramble,free,free+Scaramble
Service Type	All,Radio,DTV

Main Menu Operation

Channel Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **CHANNEL** in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the previous menu.

Auto Tuning

Refer to P. 9 and P.10.

ATV Manual Tuning

Press MENU, then choose ATV Manual Tuning.



Current CH
Set the channel number.

Color System
Select the color system
(Available System: AUTO, PAL, SECAM)

Sound System
Select the Sound system

Fine-Tune
Adjust the frequency of the channel finely.

Search
Start searching channel by pressing ► button.
Once a channel is found, it will automatically stored.
Repeat the step by changing the channel number.

DTV Manual Tuning

DVB-T Manual Tuning:



Enter the DTV Manual Tuning. Press ◀ / ▶ button to adjust the channel and press OK button to manual tune.


DVB-C Manual Tuning:



Enter the CADTV Manual Tuning. Press ▲ / ▼ button to select the item and press ◀ / ▶ button to adjust the "Frequency", "Symbol", "QAM Type" and press OK button to manual tune.

Program Edit

Press ▼ / ▲ button to select Program Edit, then press **OK** button to enter sub-menu.

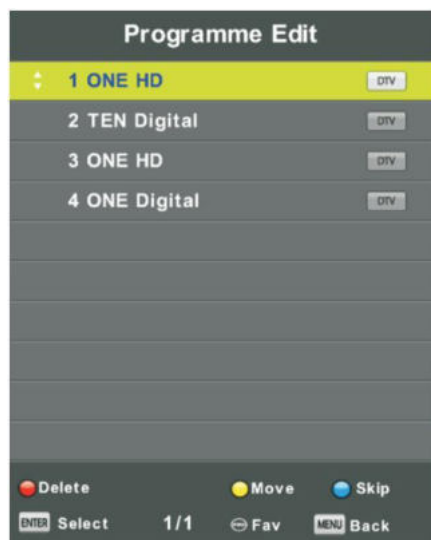

The three colored key is the shortcut key for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

Press the **Yellow** button to move the channel in favorite list.

Press the Blue button to skip the selected channel.

Press Fav button to add or remove the channel to/from your favorite list.

(Your TV set will skip the channel automatically when using CH+/- to view the channels.)

Signal Information

Press ▼ / ▲ button to select **Signal Information**, press the **OK** button to see the detail information about the signal. Only available when there is signal in DTV.

